

**RE-USABLE EAR PLUGS** DR-090-C



DR-090-CI

## Description

The Dromex® DR-090C high visibility soft pliable, corded thermo plastic rubber ear plugs are designed with optimum protection and comfort for the ear canal offering the highest level of protection against noise.

These easy to wear, lightweight, non-toxic, non-irritating waterproof, are washable, reusable and easy to carry ear plugs is a great choice for users of both helmets and safety glasses, that is comfortable for long-term wear in hot, humid work areas.

Suitable for use in environments such as machining, grinding, steel cutting and woodwork.

### Special Instructions

- Do not share ear plugs as ears can be exposed to ear infections.
- The ear plugs should be worn properly at all times in noisy surroundings.
- The ear plugs should be fitted, adjusted and maintained in accordance with the instructions provided on this packaging.
- If the recommendations are not adhered to, the protection afforded by the ear plugs will be severely impaired.
- The ear plugs may be adversely affected by certain chemical substances; avoid the use of agents (i.e. solvents and other disinfectants) that are known to be harmful to the wearer and/or the earplug.
- Regularly inspect for tears or cracks and replace if service ability is suspected to be affected. Corded ear plugs should not be used where there is a risk that the connecting cord could be caught up during use.
- Sounds above 85dB are harmful to the ears.

## **Compliance & Conformity**

Manufactured to EN 352-2: 2002 (DIN EN 352-2: 2003) as per the requirements of EC Type – examination certificate Directive 89/686/EEC (Richtlinie 89/68/EWG).

### **Specifications**

Style: Preformed triple flange re-usable ear plug,

with cord

Material earplug: High visibility fluorescent thermo

plastic rubber

Material cord: PVC (Poly vinyl chloride)

Noise attenuation data: SNR 30 dB

\* Product performs up to SNR 32dB

H 30 dB M 26 dB

L 26 dB

Also available in a protective plastic case: DR-090-CI

## Packaging, Storage & Obsolescence

- Packed in pairs in an easy to open polybag. 200 Units inside a box with dispensing tray and 10 boxes in a carton.
- Users instructions are included in the dispenser carton.
- Clean and dry ear plugs when not used for a long period of time.
- Store ear plugs in a storage box.

# **Cleaning & Maintenance**

After each use wash and rinse with warm soapy water.

# Shelf life

Recommended shelf life of this ear plug is 3 years if un-used and stored in protective packaging. Discard if noticeable damages such as tears appears on the ear plug or ear plug is detached from the cord.

#### Materials

None of the materials used in the manufacture are known to adversely affect the hygiene or health.


## **Fitting your Reusable Ear Plugs**



Hold the stem of the ear plug firmly behind the largest flange.



Reach over your head with the opposite hand and pull the top of your ear to open the ear canal. While you are still holding the ear open, push the smallest flange of the plug into your ear canal, twisting the plug slightly as you push.

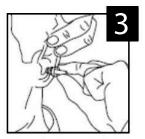

For the best noise reduction, insert plugs as deeply as possible.



Here is the reusable ear plug properly positioned in the ear canal.

#### Disposal

All industrial waste should be disposed of correctly as per local regulations and good disposal practice. Hearing protective devices should be disposed of considering the hazardous substance they were used for. Please consider recycling.

Dromex: Unit 1, 1 Blase Road, New Germany, 3620, South Africa T. +27(31) 713 1960 E. info@dromex.co.za www.dromex.co.za